


Wi-Fi/IR COMBO COMPLIANCE SYSTEMS

LCS-122-01 and LCS-122-01-D

QUICK START GUIDE

LISTEN EVERYWHERE SETUP Let's get this audio started!

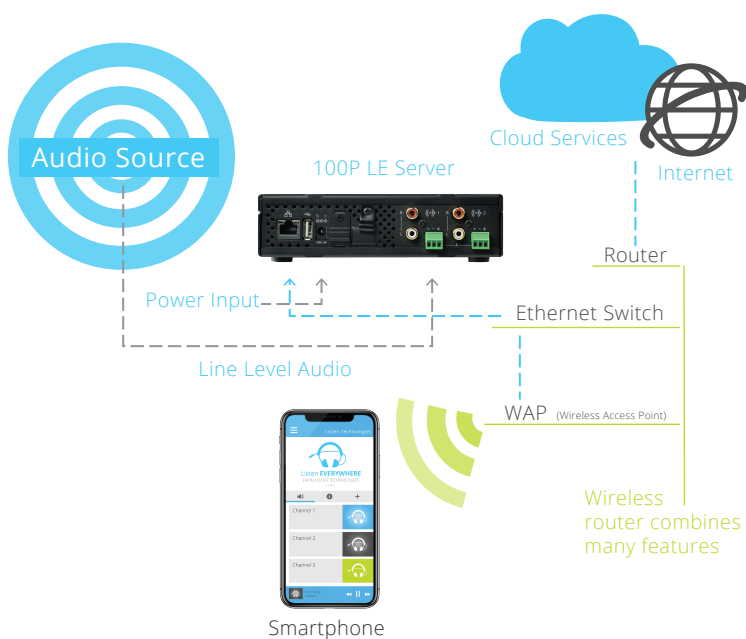

TROUBLESHOOTING TIP

Experiencing a lack of signal? Check IP addresses on the Venue Server and smartphones to ensure they are on the same network.

CLOUD SERVER SETUP (optional)

Cloud Services offers in-app marketing features including banner ads & promotional videos, web-based remote setup & maintenance, and advanced customization. Create an account with Cloud Services by visiting the Listen Everywhere registration page: www.listen-tech.com/listen-everywhere/registration

You will receive an email with login credentials to services.listeneverywhere.com once attended to by a technical services specialist during operating hours.

*Serial number looks like: LEL6-2345-43RF-TEW9

1. Connect Audio

Connect the audio source(s) to the LE server via the terminal block connectors on the rear panel. LW-100P units may use the enclosed RCA connection cable provided.

Note: The input connectors accept line-level audio inputs. The RCA connectors on the LW-100P units are unbalanced sum-to-mono inputs. If stereo is required, connect the audio source(s) to the (1)L and (2)R connectors and then select, "stereo", in the Cloud Service (see Cloud Service Setup).

2. Network Connection & Power

Connect the LE server to your local area network (LAN) via the Ethernet port on the server rear panel, then plug in the power cable. A flashing blue power LED indicates the server is booting up. Once a network connection has been established, the blue power LED will turn solid. The enclosed Cat 6 cable may be used to connect the LE server to the network router or switch. The LE server and smartphones must be on the same network.

Quick Tip: 2.4 GHz bands tend to have higher traffic; 5 GHz or dual-band access points are recommended in high-traffic areas

3. Download App

Download the Listen EVERYWHERE app. Join the Wi-Fi network associated with the Venue Server (i.e., on the same LAN). Launch the app, select channel to stream, enjoy! Available on Google Play & the Apple App Stores.



LISTENIR SETUP Setting up Transmitter



1. Connect Power


Plug in the power cable & flip the "power switch" to the desired position.

2. Connect Audio

Connect audio from sound system with an RCA or balanced terminal block to input 1. Adjust level control to be in the green level with occasional red peaks.

OR Connect Dante Audio Adapter with Audio (optional)

If you are using the Dante Audio Adapter, connect the RJ45 network cable into the Dante Adapter & plug one of the XLR outputs to input 1 on the LT-84 & the other XLR output into the 100P LE server.

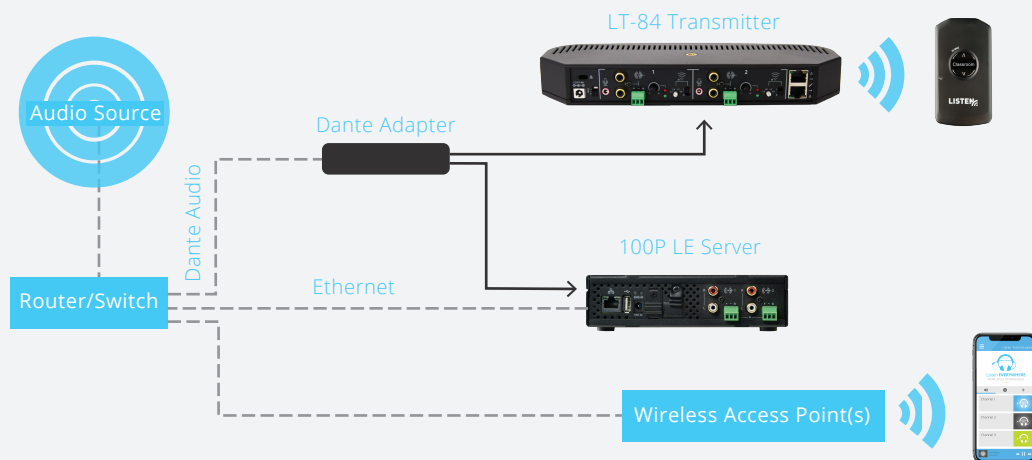

Setting up iDSP Receivers



1. Power

To turn on the iDSP receiver, hold the button for one second.

2. Plug in Headset

3. Adjust Volume

To desired level.

The receiver is charged with a micro USB charging cable provided with the system. When connected to the charger, a blinking light indicates it is being charged & a solid light indicates a full charge.

For further customization, view the quick start guides & manuals found at www.listentech.com/support/manuals



LISTEN TECHNOLOGIES 14912 Heritage Crest Way, Bluffdale, Utah 84065-4818 USA

Phone: +1.801.233.8992 Toll-Free: 1.800.330.0891 www.listentech.com

Copyright © 1998 - 2018 Listen Technologies Corporation. All rights reserved. 20200618