

Audio Guide Quick Start Guide

Prior to use, each Listen Audio Guide will need to be charged, configured and uploaded with your tour content. Please refer to the Audio Master 3 content compiler software and user manual for this process.

General Audio Guide Operation

Power On/Off ■

- Press and hold the power button for 1 second until it beeps, signifying it is powered on.
- Press and hold the power button for 10 seconds until it beeps twice, signifying it is powered off.

(note: If the alarm has been configured, it is still working even if the audio guide is turned off.)

Auto Power Off

When the audio guide is not operated for 30 minutes (factory default), it will switch off automatically. The factory default time setting may be changes using the Audio Master 3 configuration software.

Language Selection ◀◀ ▶▶

- When the audio guide is removed from the charger and turned on, you may select a language by pressing ◀◀ or ▶▶ , and then press ▶|| to confirm.
- When the audio guide is not in the language selection menu, press 993#, then press ▶|| to enter the language selection menu.
- If the designated language number is known, enter the 3-digit number plus #, then press ▶|| to switch to the designated language.

Play Tour Content Audio

- In manual mode, enter the 4-digit code associated with the desired audio track and then press the ▶|| play/pause button.
- In auto trigger mode, the audio guide will automatically play the associated audio track when the audio guide enters the beacon range.
- When audio content is playing, the ◀◀ ▶▶ back/forward buttons may be used to go back to the previous audio track or advance forward to the next audio track.

Delete Number Code

- When an incorrect code has been entered, press the ■ key to delete the code and then enter the correct code.

Low Battery

- When the battery is running low, the battery signal on the screen will flash. After 20 seconds, the audio guide will shut off.

Alarm

- When the audio guide alarm is triggered, it will make a loud beeping sound until the alarm has been disabled.
- To disable the alarm, press and hold the **#** key and then press the **■** key. This will reset the unit to default status and may be operated normally.