

NAVILUTION PA DELIVERY DEMO

Thank you for your interest in the Navilution PA Delivery Demo. Here is some information to get you started. For more information and full product manuals, please visit www.listentech.com/support/tech-docs/

LN-200N Front View

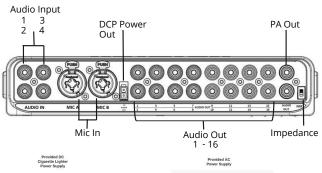

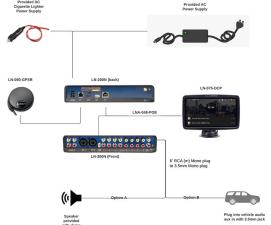

CONNECTING THE HARDWARE

Connect the GPS to the GPS port on the back of the LN-200N server.

Connect the DCP using the provided Y-Cable and green Cat5e cable.


- Y-Cable, the male RJ45 connector goes to the DCP
 - port on the back of the LN-200N server.
- The 2-pin power connector goes to the 12V2A POWER OUT on the front of the LN-200N server.
- Green Cat5e cable, connect one end into the DCP, connect the other end into the Y-Cable.

Connect power to the PWR 4 pin port on the back of LN-200N server.

- DC power source use the included cigarette lighter plug into your vehicle aux power plug
- AC power 120 240VAC, 50/60Hz use the included transformer

Using the provided RCA to 3.5mm cable connect the provided speaker to the PA Out (white) position on the front of the LN-200N server.

LN-200N Back View

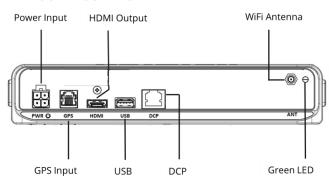



STARTING A TOUR

- 1. Apply power to the system.
- 2. Once the system has booted up you will see the Tour selection page.
- 3. Choose the Tour then choose the Route.
- 4. drive the route your have planned.
- 5. If you are triggering manually then go ahead and press the Story Timer to play the first story or select a story from the list.

