




Listen EVERYWHERE

Wi-Fi Audio Receiver 1020

Quick Start Guide

This device is an assistive listening receiver intended to be used with a Listen EVERYWHERE system to stream audio across a wireless local area network. The device is locked down and configured for use as a Wi-Fi audio receiver. No other device services or applications are accessible.

Get to Know the Receiver

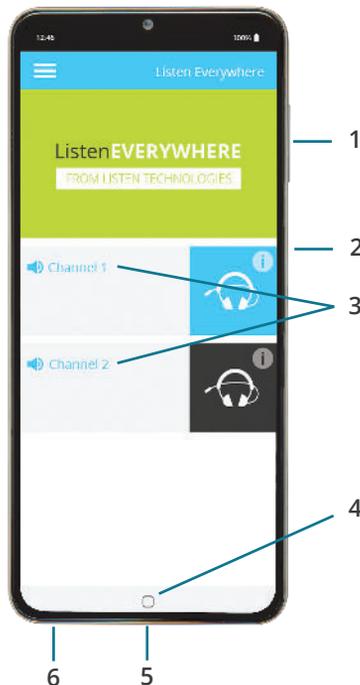

1. **Volume Controls**
2. **Power**
3. **Audio Channels**
4. **Home**
5. **Charging Port (USB-C)**
6. **Headphone Jack (3.5 mm)**

Getting Started

1. Remove the device from the protective packaging.
2. Put the receiver in the protective case. The LA-511 protective case is optional (and highly recommended) and sold separately.
3. Fully charge the device using the included USB-C charging cable. The device will indicate the charging status on the screen and indicate when the battery is fully charged.

Please note: this device includes the USB-C charging cable, but the LA-424 charging block is sold separately.

4. Power on/off the device by pressing and holding the power button.

Connection Settings

From the home screen, tap the settings icon to access the following options:

Wi-Fi – Select your Wi-Fi network and enter the password as required. The selected Wi-Fi network must be the same network

the Listen EVERYWHERE server uses to broadcast channels.

Bluetooth® – Pair wireless headphones, earbuds, speakers, or hearing aids to the receiver to stream wirelessly.

To exit the settings menu, tap the home button.

Using the Receiver

To use the receiver for the first time, connect to the Wi-Fi network streaming the audio. The receiver must be connected to the same Wi-Fi network as the server before the receiver can discover and play audio channels (see above for the Connection Settings).

1. From the home screen, tap on the Listen EVERYWHERE app icon. The app will open and then scan and display the available channels from the network.
2. Select an audio channel from the list, adjust the volume to a comfortable listening level, and enjoy!

The receiver supports wired or wireless earbuds and headphones. Plug wired earbuds or headphones into the standard 3.5 mm headphone jack or connect wireless earbuds or headphones to the device (see above Connection Settings).

Please note: using wireless Bluetooth can increase latency.

The device display will auto-timeout after 15 seconds. Tap the power button to turn the display back on.

Support

For more information, go to www.listeneverywhere.com/support



Terms and Conditions

By purchasing or opening this package, you are agreeing to Listen Technologies Terms and Conditions (“T&Cs”). This product from Listen

Technologies is intended for use as an assistive listening receiver, and the user agrees to use it for such purpose. This device has been provisioned for enterprise use to stream audio across a wireless local area network, to be used in combination with a Listen EVERYWHERE server. This device is not intended to be connected to a cellular network. Use of this device outside its intended purpose violates these terms and conditions, and Listen Technologies is not responsible for result of such action. If you do not agree, return this device in accordance with the applicable return policy.

Listen Technologies

14912 Heritage Crest Way
Bluffdale, UT 84065 USA

Phone: +1.801.233.8992
Toll-Free: 1.800.330.0891

www.listentech.com

Copyright © 1998 - 2023 Listen Technologies Corporation. All rights reserved. 20230117JP.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by [licensee name] is under license. Other trademarks and trade names are those of their respective owners.